


Corrugated Tank Fitting Installation Guide



Promax
LIQUID MANAGEMENT SOLUTIONS

1 Components

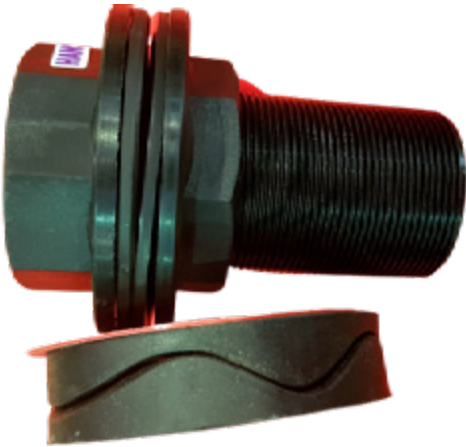

4 Run a bead of silicon between the thread and rubber of both seals and insert the fitting.



2 Discard Flat Washers



5 Tighten
(Note: Red washer must be used directly underneath the tightening nut)



3 Drill hole directly on the crown or hollow of the rib.

Clean the swarf from the cut hole.



6 Wipe off excess silicon



Notes:

- Corrugated rubbers do not match the tank corrugation perfectly, but will compress into shape.
- Rubbers should not twist when tightening if installed correctly.

